



- (L) Lautstärke/Pegelregler Mikro - Radio  
VOLUME / LEVEL CONTROL MIC - RADIO
- (P) Pegelregler Platte  
GAIN CONTROL
- (K) Klang/Mischregler  
TONE MIXING CONTROL

Änderungen vorbehalten  
ALTERATIONS RESERVED

R	102	103	104, 106	105	107, 108	111	112	121	133	114, 115	116	117, 118	119	120, 123, 124	125	126, 127	128, 129, 130, 131, 132, 134	135	
C	203	204, 206	205	206, 207	208	209	210	211, 212	213	214	215	216	217	218, 219, 220, 221, 222, 223, 224	225	226	227, 228, 229, 230, 231, 232, 233, 234	235	236, 237

Betriebsart / OPERATING POSITION	Konfektfederastze CONTACTS				Geschw. Umsch. SPEED SWITCH
	W1	W2	17	18	
Wiedergabe PLAYBACK	•	•	•	•	
Aufnahme RECORDING			•	•	
Trick TRICK			•		
Schnelllauf FAST WIND					
Main OFF MAIN OFF					•

• Kontakt geschlossen CONTACT CLOSED

