



Gezeichnete Tastenstellung UKW

- | | | | |
|--|--------|--|--------|
| | 1/10 W | | 350 V- |
| | 1/4 W | | 500 V- |
| | 1/2 W | | 250 V~ |
| | 1 W | | 500 V~ |

M540 / T5521

ECC 81



EF 89



ECH 81



EABC 80



EL 84



EM 80

